




PERSONAL SKIN GUARDIAN

Protection with 3 % RADICARE®-GOLD

SWISS EXPERTISE 

RAHN
Your partner for excellence

Step under your personal Faraday Shield

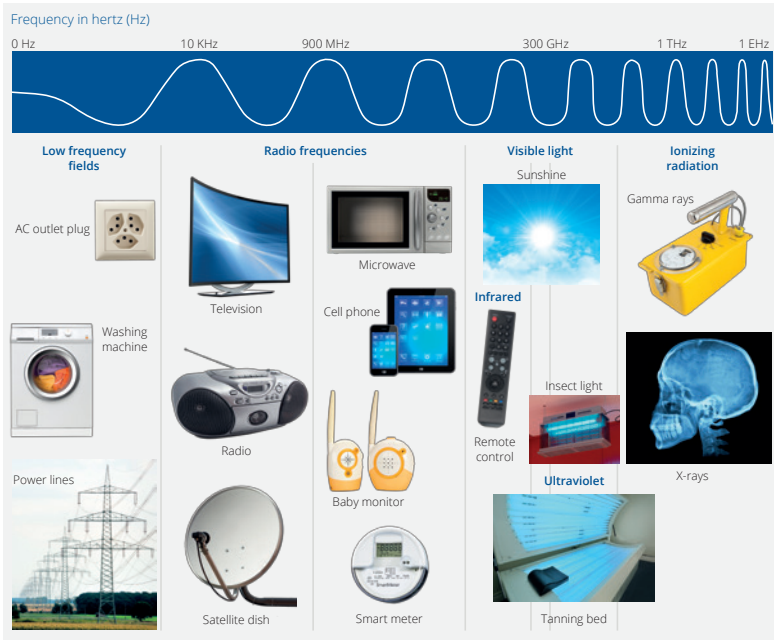

Personal Skin Guardian

with 3% RADICARE®-GOLD

(700389.0001)

Key ingredients RADICARE®-GOLD: Your Personal Faraday Shield

How to use Gently apply this cream every morning on your face and décolleté.



St	Substance	INCI name USA	% [w/w]	Manufacturer
1	Water demin.	Water	71.85	several
	Dermosoft MCA Variante	Dipropylene Glycol, Caprylyl Glycol, Glyceryl Caprylate	1.00	Evonik Dr. Straetmans, DE
2	Disodium EDTA	Disodium EDTA	0.10	several
3	Tego Carbomer 340 FD	Carbomer	0.30	Evonik Dr. Straetmans, DE
4	Myrtil 318	Caprylic/Capric Triglyceride	5.00	BASF, DE
	Neo Heliopan HMS	Homosalate	2.00	Symrise, DE
	Dermofeel BGC	Butylene Glycol Dicaprylate/Dicaprate	3.00	Evonik Dr. Straetmans, DE
	Neo Heliopan 303	Octocrylene	2.00	Symrise, DE
	Amisoft HS-11P(F)	Sodium Stearoyl Glutamate	0.15	Ajinomoto, JP
	Sistema SP70-C	Sucrose Stearate	1.00	Sistema B.V., NL
	Dermofeel GSC	Glyceryl Stearate Citrate	2.00	Evonik Dr. Straetmans, DE
	Tego Alkanol 1618	Cetearyl Alcohol	2.00	Evonik Dr. Straetmans, DE
	Parsol 1789	Butyl Methoxydibenzoylmethane	2.00	DSM, NL
	Keltrol CG-SFT	Xanthan Gum	0.30	CP Kelco, US
5	Dermofeel Toco 70 non-GMO	Tocopherol, Helianthus Annuus (Sunflower) Seed Oil	0.20	Evonik Dr. Straetmans, DE
	Dow Corning EL-9240 Silicone Elastomer Blend	Dimethicone, Dimethicone Crosspolymer	3.00	Dow Corning, US
5	NaOH solution 10%	Sodium Hydroxide, Water	0.90	several
6	RADICARE®-GOLD	Crambe Abyssinica Seed Oil, Beta-Carotene, Xanthophylls, Tocopherol, Helianthus Annuus (Sunflower) Seed Oil, Rosmarinus Officinalis (Rosemary) Leaf Extract	3.00	RAHN AG, CH
7	Perfume Creme P123	Fragrance	0.20	Huber the Nose, CH

Production: Mix 1/Add 2 while stirring/Sprinkle 3 on the surface, wait until the powder is fully hydrated, mix thoroughly until completely smooth, heat to 70°C while stirring/Mix 4, heat to 70°C while stirring/Add 4 to 1 – 3 while stirring, homogenise/Cool to 40°C while stirring/Add 5 – 7 separately, homogenise/Cool down to 25°C while stirring

RAHN GmbH
Hahnstrasse 70
DE-60528 Frankfurt am Main
Tel. 0800 1 816 015

RAHN (UK) Ltd.
55 Baker Street
GB-London W1U 7EU
Tel. 0800 0 323 743

RAHN France Sarl
91 rue de Faubourg Saint-Honoré
FR-75008 Paris
Tel. 0800 913023

RAHN USA Corp.
1005 North Commons Drive
Aurora, Illinois 60504, USA
Tel. +1 630 851 4220

RAHN Trading (Shanghai) Co. LTD
Room 411, 4th Floor, Building 3
No. 2350 Duzhuang Road,
Zhuanqiao Town, Minhang District,
Shanghai 201108, P.R. of China
T +86 21 5442 88 71 ext. 101
M +86 185 1621 0500

cosmetics@rahn-group.com
www.rahn-group.com

RAHN AG

Dörflistrasse 120
CH-8050 Zürich
Tel. +41 44 315 42 00

