



SPOT STOP-GEL

with 3 % SEBOCLEAR™-MP


SWISS EXPERTISE 

RAHN

Your partner for excellence

Dysbalanced microbiota

trigger factor for acne

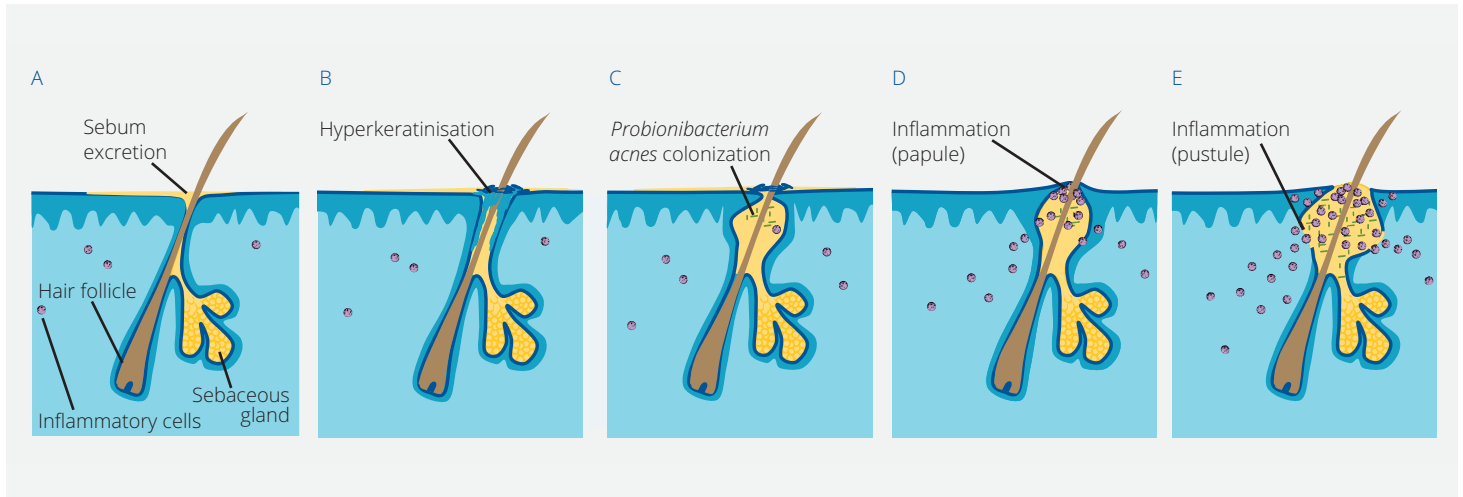



SPOT STOP-GEL with 3 % SEBOCLEAR™-MP (700388.0001)

Key ingredient:

SEBOCLEAR™-MP: Balanced Microbiota in Ageless Skin

How to use

Apply gently the treatment every morning and evening on the spot.



St	Substance	INCI name USA	% [w/w]	Manufacturer
1	Water demin.	Water	90.85	several
	Dermosoft MCA Variante	Dipropylene Glycol, Caprylyl Glycol, Glyceryl Caprylate	1.00	Dr. Straetmans, DE
2	Tego Carbomer 340 FD	Carbomer	0.30	Evonik Industries AG, DE
3	NaOH solution 10 %	Sodium Hydroxide, Water	0.80	several
4	Abil Care 85	Bis-PEG/PPG-16/16 PEG/PPG-16/16 Dimethicone, Caprylic/Capric Triglyceride	1.00	Evonik Industries AG, DE
5	SEBOCLEAR™-MP	Propanediol, Maclura Cochinchinensis Leaf Prenylflavonoids	3.00	RAHN AG, CH
6	Perfume NihilO001	Perfume	0.05	Huber the Nose, CH
7	Dow Corning EL-9240 Silicone Elastomer Blend	Dimethicone, Dimethicone Crosspolymer	3.00	Dow Corning, US

Production

Mix 1/Sprinkle 2 on the surface, wait until the powder is fully saturated, mix thoroughly until completely smooth/Add 3 to 1 & 2 while stirring strongly, homogenise/Add 4 to 1 – 3 while stirring, homogenise/Add 5, 6 and 7 separately while stirring.

RAHN GmbH
Hahnstrasse 70
DE-60528 Frankfurt am Main
Tel. 0800 1 816 015
Fax 0800 1 816 016

RAHN (UK) Ltd.
55 Baker Street
GB- London W1U 7EU
Tel. 0800 0 323 743
Fax 0800 0 323 744

RAHN France Sarl
91 rue de Faubourg Saint-Honoré
FR-75008 Paris
Tel. 0800 913023
Fax 0800 918268

RAHN USA Corp.
1005 North Commons Drive
Aurora, Illinois 60504, USA
Tel. +1 630 851 4220
Fax +1 630 851 4863

RAHN Trading (Shanghai) Co. LTD
Room 105, Building 1
3669 Jin Du Road
Shanghai Xinzhuang Industry Park
Shanghai 201108 , P.R. of China
Tel. +86 21 5442 8871
Fax +86 21 5442 8879

cosmetics@rahn-group.com
www.rahn-group.com

RAHN AG

Dörflistrasse 120
CH-8050 Zürich
Tel. +41 44 315 42 00
Fax +41 44 315 42 45



RAHN

Your partner for excellence